

## Worklight Dual Head

LED-680

LED-680T



**IP54** **CE**  
**IK07** **RoHS**

### Powerful multi-directional flooding output

#### Light Output

Twin heads deliver high quality, uniform illumination upto 4500 Lumens

Single button controlled multiple settings for optimized control over output and run-time

	1ST PRESS	2ND PRESS	3RD PRESS	4TH PRESS
INTENSITY	25%	50%	75%	100%
LUMENS	750	1500	3000	4500
RUN TIME	12 hours	6 hours	3.5 hours	2 hours

**LED-680**  
Floodlight



#### Sturdy Construction

- IP 54 Rated**  
Protected against dust and effects of water spray from any direction
- IK 07 Rated**  
Impact-proof nylon body and handle with sturdy polycarbonate lens will stand-up to tough jobsite conditions

#### Versatile Use

Can be used as

- Compact and portable, free standing floodlight bright enough to light up large areas
- On tripod stand to light overhead work and minimize shadows when directing the light downwards


Replaceable battery back gives infinite life to the worklight. Light has a working life upto 100,000 hours of use

#### Charging of Battery

100-240V—20V 1.1A charger (included)

#### Charge Your Phone

Rechargeable and removable battery pack doubles up as a power bank

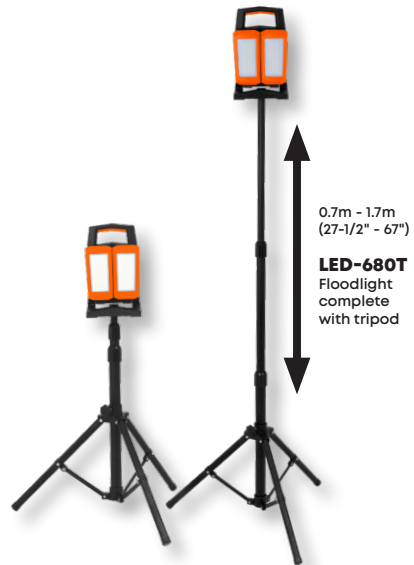

0.7m - 1.7m  
(27-1/2" - 67")

**LED-680T**  
Floodlight  
complete  
with tripod

CAT NR.	DESCRIPTION	SIZE (LxHxD)	
		(INCH)	(MM)
LED/680	Floodlight	11-3/16 × 7 × 5-1/8	288 × 176 × 131
LED/680T	Floodlight complete with tripod	11-3/16 × (27-1/2 to 67) × 5-1/8	288 × (699 to 1702) × 131

#### POWER SOURCE



14.8V 5200 mAh





## PACKAGE CONTENT

DESCRIPTION	QTY.
Duo-Play Super Power Rechargeable Floodlight	1
Charger	1
Tripod*	1
O.I.P.M.	1

\*For LED/680T only

## SAFETY INFORMATION

- Follow workshop health & safety rules, regulations and conditions when using the rechargeable floodlight.
- When not in use, rechargeable floodlight should be stored in a dry location to inhibit rust.
- During their period of use, accessories must be checked for wear, cracks and other damage, replace any damaged or worn parts.
- Use genuine parts only. Unauthorized parts may be dangerous and will void the warranty.
- Keep the rechargeable floodlight clean and in good working order for best and safest performance.
- DO NOT use the rechargeable floodlight in the immediate vicinity of inflammable materials or gases.
- DO NOT point the rechargeable floodlight directly in your own or any other person's or animal's eyes.
- DO NOT drop, throw or abuse the rechargeable floodlight.
- Eyes protection: Wear a protective mask or protective eyewear.
- Check that the product has not suffered any damage during transport or storage. Clean and remove any dust or residual packing material.
- Read the instructions carefully before using rechargeable floodlight and keep them for further reference.

## WARNING!

- DO NOT immerse rechargeable floodlight in water.
- DO NOT place rechargeable floodlight near a fire or any other source of intense heat.
- DO NOT attempt to open, disassemble, modify or service the rechargeable floodlight.
- DO NOT expose rechargeable floodlight to temperatures above 40°C (104°F).
- DO NOT use rechargeable floodlight if you suspect that the batteries or the casing is damaged.

## OPERATING INSTALLATION

- Fully charge the battery before the first use. To charge, remove the battery from the light by tilting the light and sliding the battery out while pressing the button on the battery.
- Now connect the battery to the power source with the help of charger provided with it.
- While charging, the green LED charge indicators at the top of the battery, near the power button, will blink continuously.
- When the battery is fully charged, all the indicator LEDs will turn green. Full charging takes about 4-5 hours.
- Slide back the battery into the light again till a click sound is heard.
- Press the power button located at the top of the light
  - Once for 750 lumens (25% intensity)
  - Twice for 1500 lumens (50% intensity)
  - Three times for 3000 Lumens (75% intensity)
  - Four times for 4500 lumens (100% intensity)
  - Five times for switching "OFF" the light.
- \*To mount the floodlight on the tripod remove the screw from the top of the tripod. Place the floodlight on the tripod and align the centre hole of the base of the floodlight to the hole on the top of the tripod. Now secure the assembly using the screw.

\*For LED/680T only

## MAINTENANCE

- Always use the charger provided with the floodlight for charging.
- Clean any dirt from the housing or the lens immediately, since it could cause overheating.
- If required, clean with a dry or slightly moist, clean cloth and a mild detergent. Do not use cleaners that contain abrasives or solvents.
- Fully charge the floodlight before storing it for a long time.
- When not in use, floodlight should be stored in a dry location.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The floodlight has low lumen output or does not work	Low battery	Recharge the battery
If the floodlight still doesn't work		Contact nearest authorized service dealer

## DISPOSAL

The components or the used products must be given to companies that specialize in the disposal and recycling of industrial waste.



Series of horizontal dotted lines for text entry.

**NOTE**





---

**Groz Engineering Tools Pvt. Ltd.**  
**Groz Net Industries**

Village Kherki Daula, National Highway-8,  
Gurugram-122004, Haryana, INDIA

**Tel** +91.124.282.7700

**E-Mail** [info@groz-tools.com](mailto:info@groz-tools.com)

**Url** [www.groz-tools.com](http://www.groz-tools.com)

The GROZ name, GROZ logo and the  mark are trademarks of GROZ Engineering Tools Pvt. Ltd., India

