

7 Drawer Portable Workstation

MTB-7

Manufactured from heavy gauge steel sheet

Rugged double wall construction for enhanced durability

Corrosion resistant powder coated finish

Drawers with ball bearing slides for 100% opening

All drawers lined with 2mm vinyl sheet


Integrated centralized locking system to lock/unlock all drawers in a single operations





4 heavy duty castors
5" x 2" (125 mm x 50 mm)

Rear castors with brakes for safety

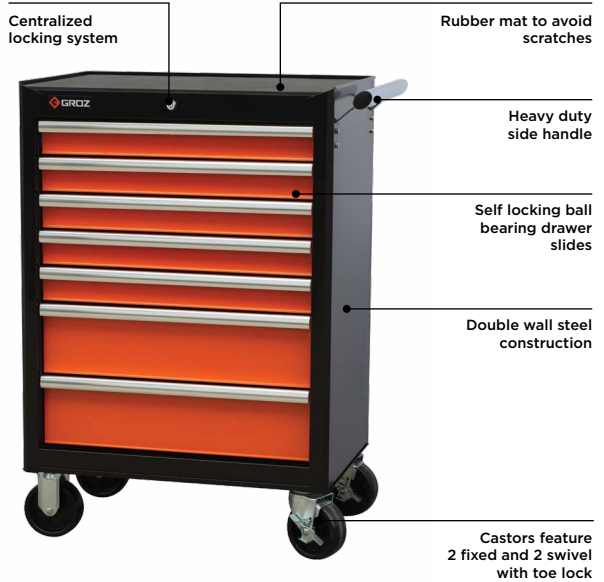Ergonomic handle for ease of movement


Rubber mat top for protection from scratches & damage



BALL BEARING	DOUBLE WALL CONSTRUCTION	AVG. DRAWER LOAD CAPACITY	TROLLEY LOAD CAPACITY
		 45 KG	 450 KG

SPECIFICATIONS

OVERALL DIMENSIONS (W x D x H)	27" x 18" x 39" (679 mm x 461 mm x 1000 mm)
CASTER SIZE (DIAMETER x WIDTH)	5" x 2"
OVERALL WEIGHT OF CABINET	54 Kg
CABINET TOP	Rubber Mat

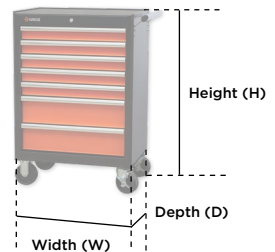

CAT NR.	DESCRIPTION
MTB/7	7 Drawer Portable Workstation

SAFETY INFORMATION

- Keep the work area clean and dry. Damp or wet work areas can result in injury.
- When not in use, workstation should be stored in a dry location to inhibit rust.
- Do not modify this workstation, and do not use this workstation for a purpose for which it was not intended.
- Check for damaged parts. Before using this product, carefully check that it will operate properly and perform its intended function. Replace damaged or worn parts immediately.

WARNING!

- Read and understand all instructions. Failure to follow all instructions listed above may result in serious injury.

PACKAGE CONTENT

DESCRIPTION	QTY.
7 Drawer Portable Workstation	1
Side handle	1
Bolt & washer set (Size 10 mm)	4
Fixed Caster	2
Swivel Caster with toe lock	2
Bolt & washer set (Size 13 mm)	16
O.I.P.M.	1

TOOLS NEEDED

- 10 mm spanner
- 13 mm spanner / 1/2" spanner


BEFORE INSTALLATION

- Check that the product has not suffered any damage during transport or storage.
- Keep the workstation away from heat and sharp edges.

INSTALLATION


1. Put the workstation up-side down on the floor and attach the 4 castors on the base of workstation using bolt & washer sets (Size 13 mm)

Note: Swivel caster with toe lock should be mounted on the same side as the handle.

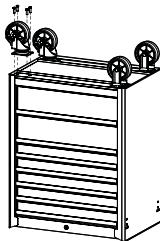


2. Now keep the workstation upright. Insert the side handle into the cabinet wall and attach with bolt & washer sets (Size 10 mm).

Note: The side handle should be mounted on the same side as the swivel caster with toe lock.

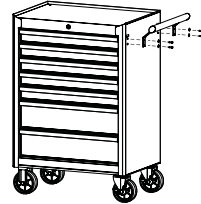

3. The workstation is ready to use.
4. To remove a drawer with roller slides, pull the drawer completely out. Press down the left tab and lift up the right tab on the sliders, pull drawer off slides.

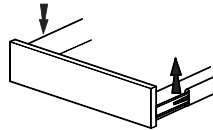

5. To reinstall the drawer, realign it with the internal drawer slide and push in until locked in place.

OPERATING INSTRUCTIONS

- To avoid tipping, open one drawer at a time.
- Close all drawers when moving the unit.
- Every workstation has a unique number written on its lock. Only the key with that number can be used to lock or unlock the drawers.
- Close all drawers before locking. If a drawer is not locked, unlock the unit and push drawer to the closed position and then lock the unit again.

MAINTENANCE

Periodically lubricate casters and tighten all hardware

DISPOSAL

The components or the used product must be given to companies that specialize in the disposal and recycling of industrial waste.



GROZ WARRANTY POLICY

GROZ makes all efforts to ensure that its products meet the highest standards of quality and durability and warrants to the original purchaser its range of products for a period of 12 months from GROZ Invoice date, against defects in materials and workmanship. If the GROZ product is part of a set, only the portion that is defective is subject to this warranty.

This warranty does not apply to damage due directly or indirectly, to misuse, abuse, wear and tear, negligence or accident, repairs or alterations outside GROZ plants, or to lack of maintenance. GROZ shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special or consequential damages arising from the use of its products. It is upto the user to determine suitability and safety of the product for their intended use, and the user assumes all risks and liability herewith.

In no event, shall GROZ's liability exceed the invoiced cost of the product. In case of identification of defect covered under this warranty, the same must be notified in writing to GROZ /GROZ designated authorized service location. Proof of purchase date must accompany the complaint. GROZ reserves the right to call back the faulty unit, all charges including transportation prepaid. On verification of the defect, the unit will be repaired or replaced with a new or reconditioned product or part of equal utility or a full refund given at GROZ's discretion. The repaired /replaced units will be returned to the user freight prepaid, using most economical freight carrier. However if determined that the defect resulted from causes not within the scope of the warranty, then the cost of returning the product would be to buyer's account.

Groz Engineering Tools (P) Ltd. Groz Net Industries

Village Kherki Daula, National Highway-8,
Gurugram-122001, Haryana, INDIA

Tel +91.124.282.7734/40, 2827777

Fax +91.124.2827980, 2827986

E-Mail info@groz-tools.com

Url www.groz-tools.com

The GROZ name, GROZ logo and the  mark are trademarks of GROZ Engineering Tools (P) Ltd., India